

## Reading TiltWatch RFID:

Configure the reader to read address 0x21(33) in the standard EPC memory bank.

```
// 1. Select EPC memory bank (bank 1)
    x.MemoryBank = MemoryBank.Epc;

// 2. Point to address 21h in EPC memory bank
    x.WordPointer = 33;

// 3. Say how many bits to read
    x.WordCount = 1;

// 4. Do the actual read operation settings.
    Report.OptimizedReadOps.Add(x);
```

If this bit is **8104**, the indicator has been triggered.  
If the bit is **8114**, the indicator has not triggered.